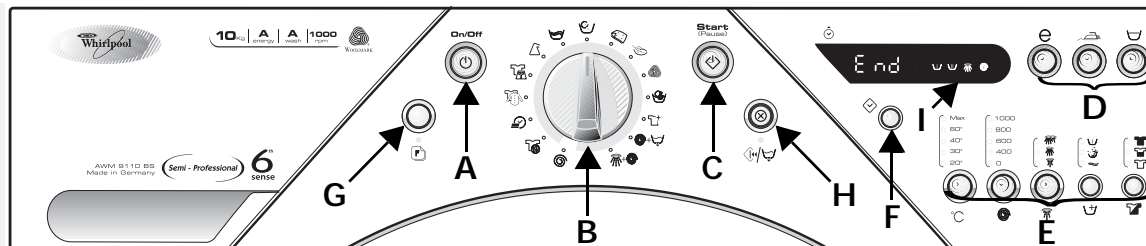


- A. "On/Off" button
- B. Programme selector
- C. "Start (Pause)" button
- D. Option buttons
- E. Modifiers
- F. "Start delay" button
- G. "Favourites" button
- H. "Reset (Drain)" button



 
 

 
 
 
 

 
 
 

 
 
 

 
 

 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 

 



 
 


 
 
 
 
 
 



 

 
 
 
 
 






 
 
 
 
 
 
 

 

 
 
 
 

 
 
 
 
 
 
 
 
 

 

 
 
 
 
 
 

 

 

 
 

 


## I. Programme sequence indicator



Selecting any option the indication lights up. When the combination of programme, additional options/modifiers and temperature is not possible, the indication lights switch off automatically and a signal sounds.

\*: optional / Yes: dosing required.

Programme		Care labels <sup>2)</sup>	Type of wash/Notes  - Respect the manufacturer's recommendations on the care label.	Max. Load  kg	Detergent and additives			Special Options and Modifiers							Max. Spin Speed  rpm	Temperature  °C		
					Pre-wash	Main wash	Softener	Start delay	Eco	Easy ironing	Rinse hold	SkinCare	Intensive rinse	Pre-wash			Clean +	Soiled
																		Heavy soil
	Sanitary / (Antibacterial)		Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. If you select 95°C, this programme eliminates bacteria, ensuring sanitization of your laundry.	10.0		Yes											1000	max.
	Heavy duty		Slightly to normally soiled bed linen, table linen, shirts, trousers etc. made of cotton and linen.	10.0		Yes											1000	20 to 60
	Synthetics		Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	5.0		Yes											1000	20 to 60
	Kids wear		Normally soiled kids garments made of cotton. <i>For heavily soiled clothes, select "Prewash" option.</i>	5.0		Yes				—							1000	20 to 60
	Daily		Programme for slightly to normally soiled fabrics made of cotton and/or synthetic fibres.	5.0	—	Yes								—		—	1000	20 to 60
	Express		Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	5.0	—	Yes			—	—	—			—		—	1000	20 to 30
	Sport		Normally soiled and sweaty sportswear made of cotton jersey or microfibres. This programme includes a prewash cycle - you can add detergent also to the prewash chamber. Do not add any softener.	4.0		Yes	—		—	—					—	—	1000	20 to 60
	Big items		Blankets made of synthetic fibres, bedcovers filled with polyester or other artificial fibres, sleeping bags, bathmats and similar items.	4.0		Yes				—					—		1000	20 to 95
	Delicates		Curtains and delicate dresses, skirts, shirts and blouses.	4.0		Yes			—								800 <sup>1)</sup>	20 to 40
	Wool		Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	3.0	—	Yes			—	—				—	—	—	1000	20 to 40
	Handwash		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>A very gentle spin is used in this programme.</i>	3.0	—	Yes			—	—				—	—	—	800 <sup>1)</sup>	20 to 30
	Whitest whites		White and robust cotton laundry. With an additional rinse to avoid residues, this programme is ideal to be used with stain removers on oxygen basis; select "Clean +" option in this case.	10.0	—	Yes											1000	20 to 60
	Gentle Spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	10.0	—	—	—		—	—	—	—	—	—	—	—	800 <sup>1)</sup>	—
	Rinse & Spin	—	<i>Same as the last rinse and the final spin in the "Heavy duty" programme.</i>	10.0	—	—			—	—	—			—	—	—	1000	—
	Drain & Spin	—	Use this programme to drain your washer or to drain and spin your wash load. <i>Delicate fabrics, handwashables and woollens should be drained with no spin or low spin speed to avoid fabric stress.</i>	10.0	—	—	—		—	—	—	—	—	—	—	—	1000	—

<sup>1)</sup> For improved garment care, spin speed is restricted in these programmes.  
<sup>2)</sup> In this column are indicated the most suitable care labels, but not all which are possible to be treated with the programmes.

The wool cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0805

IF THE WASHING MACHINE APPEARS TO BE DAMAGED, CONTACT THE MACHINE OWNER AND, IF NECESSARY, THE AFTER-SALES SERVICE.



CONSUMPTION DATA							
Programme	Temperature (°C)	Load (kg)	Water (l)	Energy for cold fill (kWh)	Energy for hot fill** (kWh)	Approximate programme duration with cold fill (hours : minutes)	Approximate programme duration with hot fill (hours : minutes)**
Sanitary (Antibacterial)	95	10.0	102*	3.02	1.98	2:50	2:05
Heavy duty with "Eco" and "Heavy soil" ***	60	10.0	76	1.51	0.82	3:10	3:10
Heavy duty	60	10.0	78	1.59	0.75	2:10	2:00
Heavy duty	60	5.5	58	1.20	0.70	1:45	1:40
Heavy duty	60	3.0	44	0.90	0.65	1:30	1:25
Heavy duty	60	1.0	28	0.60	0.46	1:20	1:20
Heavy duty	40	10.0	96	1.04	0.25	2:10	1:25
Heavy duty	40	5.5	50	0.52	0.22	1:30	1:20
Heavy duty	40	3.0	40	0.50	0.20	1:15	1:10
Heavy duty	40	1.0	30	0.36	0.19	0:55	0:50
Synthetics	40	5.0	61	0.75	0.35	1:45	1:45
Synthetics	40	3.0	55	0.65	0.32	1:45	1:35
Kids wear	40	5.0	75	0.64	0.25	1:45	1:30
Daily	40	5.0	50	0.70	0.25	1:00	1:00
Express	30	5.0	40	0.35	0.09	0:30	0:30
Sport	30	4.0	52	0.47	0.17	1:30	1:30
Big items	40	4.0	80	0.60	0.34	1:20	1:20
Delicates	30	4.0	86	0.45	0.45	0:55	0:55
Wool	40	3.0	68	0.70	0.70	0:45	0:45
Handwash	30	3.0	97	0.45	0.45	0:40	0:40
Whitest whites	60	10.0	98	1.35	0.75	2:15	2:10

The remaining programme time can deviate from the values in the table as it depends on the size of your wash load, water inlet temperature etc.; the remaining time indication is newly calculated and updated if necessary approximately 20 minutes after programme start.

\* The consumption data for "Heavy duty" refer to a programme setting without "Eco" and "Heavy soil", except the data which is indicated in the line marked with "\*\*\*\*".

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* The grey shaded columns show energy consumptions and programme durations for the washing machine being connected to both hot and cold fill, with a hot fill inlet temperature of 60°C. The columns left from them show energy consumptions and programme durations for the washing machine being connected to cold water only by the Y-adapter.

\*\*\*\* Reference programme for Energy Label (Heavy duty 60°C with default settings).

## ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table and in the chapter "Detergent and Additives" in your Instructions for Use.

- Press **"On/Off"** to switch on the washer. The light of the selected programme is on, and the **"Start (Pause)"** button blinks.
- Turn the **programme selector** to the desired programme - it is marked by a light.
- The predefined **temperature** and **spin speed** can be altered by pressing the "Temperature" and the "Spin speed" modifier.

## SELECT ANY DESIRED OPTION OR MODIFIER

Selecting any option or modifier, the indication lights up. If the combination of programme, options or modifiers is not possible, the indication lights switch off automatically and a signal sounds.

**"Eco" button**

- The duration of the wash is extended and the temperature reduced. This saves you energy and maintains good washing results.

**"Easy ironing" button**

- Reduces creasing by increased water quantity and a very gentle spin.

**"Rinse hold" button**

- The laundry remains in the last rinse water without being spun: this prevents creasing and colours from changing.

- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- Do not leave the laundry to soak in the rinse hold for too long.

**Note:** The programme starts to "Rinse hold" when the "Rinse hold" button light blinks; the **"Start (Pause)"** button light also blinks.

**Terminate the "Rinse hold" option** :

- Press the "Rinse hold" or the **"Start (Pause)"** button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, press and hold the **"Reset (Drain)"** button for a few seconds. The water is drained out then, before the door can be opened.

**"Spin speed" modifier**

- Every programme has an automatic predefined spin speed.
- Press the button to set another spin speed.
- If you select spin speed "0", the final spinning is cancelled and the water is drained out only at the end of the programme.

**"Rinse" modifier**

- "SkinCare"** : maximum amount of rinse water is added, and rinse cycle is prolonged.
- "Intensive rinse"** : more rinse water is added, and rinse cycle is prolonged.
- Particularly suitable for areas with very soft water, for baby clothes or to help people with skin allergies.

**"Options" modifier**

➔ **Prewash** :

- Adds a prewash cycle to the programme selected.
- Use only for heavily soiled loads (e.g. sand, granular dirt).
- Increases the cycle time by approx. 25 minutes.
- Do not use liquid detergent for the main wash when selecting "Prewash".

➔ **Clean +**

- Choose this option if you use an in-wash additive for stain removal (powder, for example Vanish).
- Optimizes the additive's efficiency to get better wash performance and stain removal.
- Select temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the prewash chamber.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

➔ **Normal**

**"Soil level" modifier**

- Adapts the programme duration to the soil level of your laundry.
- = Normal / = Soiled / = Heavy soil

## SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the washing machine offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and options/modifiers.

Press and hold the **"Favourites"** button for some seconds; the light goes on and a signal sounds when the programme setting is saved. Next time you want to use your individual programme setting, turn the programme selector to the desired programme, **shortly** push the **"Favourites"** button and start by pressing **"Start (Pause)"** .

If you want to replace the saved setting by another one:

- Select the programme desired and the new temperature, spin, options/modifier setting.
- Press and hold the **"Favourites"** button for at least 3 seconds; the previously saved setting is replaced by the new one.

## START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options/modifiers as desired.
- Press the "Start delay" button to select the delay time by 1 to 24 hours;
- Press and hold the **"Start (Pause)"** button ; the countdown of the delay time begins. The light of the "Start delay" button will keep blinking until the programme starts.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.

**To cancel the "Start delay":**

- Press **"Reset (Drain)"** for at least 3 seconds, or set the delay time to "0:0" - the delay time will disappear from the display after a few seconds.

## PROGRAMME START

Turn on the tap and press and hold the **"Start (Pause)"** button - the button's light stops blinking and goes on; it will take some time until water enters into the washing machine.

The programme sequence indicator on the display shows the sequence reached in the programme. After starting the programme, the indication runs from left to right through "Add garment", prewash, wash, rinse, spin. When a programme sequence is finished, the corresponding symbol goes off. The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, an animation appears on the display and the and the "6<sup>th</sup> Sense" symbol sense lights up.

## ADD WASHING/DOOR LOCK

As soon as a programme starts, the "Door locked" symbol lights up on the display.

You can interrupt the programme by pressing **"Start (Pause)"** - the light blinks. The "Door locked" symbol on the display goes off and you can open the door. In certain programme phases, the "Door locked" symbol remains lit to show that the door cannot be opened in the present programme phase, e.g. when the water level is too high or during spinning.

As long as the "Add garment" symbol lights up on the display, you can add more washing: press **"Start (Pause)"** , open the door, add your washing, close the door and press **"Start (Pause)"** to continue the programme.

## PROGRAMME END

"End" appears on the display, and a signal sounds.

- Switch the machine off by pressing **"On/Off"** .
- Turn off the tap and open the door to unload your washing. Leave the door open for some time so that the washer's inside can dry.

## CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

- Press the **"Start (Pause)"** button to interrupt the programme. The light blinks.
- Select the new programme, temperature and options/modifiers as desired.
- Press the **"Start (Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## RESET A RUNNING PROGRAMME BEFORE THE END

Press and hold the **"Reset (Drain)"** button for a few seconds; the light blinks. It will take some time until any existing water is drained out and the door can be opened (up to 10 minutes). Caution, the washing could still be hot!

## HOT ("H") / COLD ("C") FILL INSTRUCTION

Please observe that both inlet valves (red and white) of the washing machine have to be connected to the water supply. There are two alternative ways of doing this:

### Connect hot and cold water supply (Fig.1):

1. Fix one water inlet hose at the red valve ("H") of the washing machine and at the hot water tap.
2. Fix the other water inlet hose at the white valve ("C") of the washing machine and at the cold water tap.

To get the optimum performance you should use both the hot and cold water supplies.

#### Make sure:

- a) The connections are tight, but do not overtighten by using a tool.
- b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).
- c) And see Instructions for Use "Connect the water supply hose".

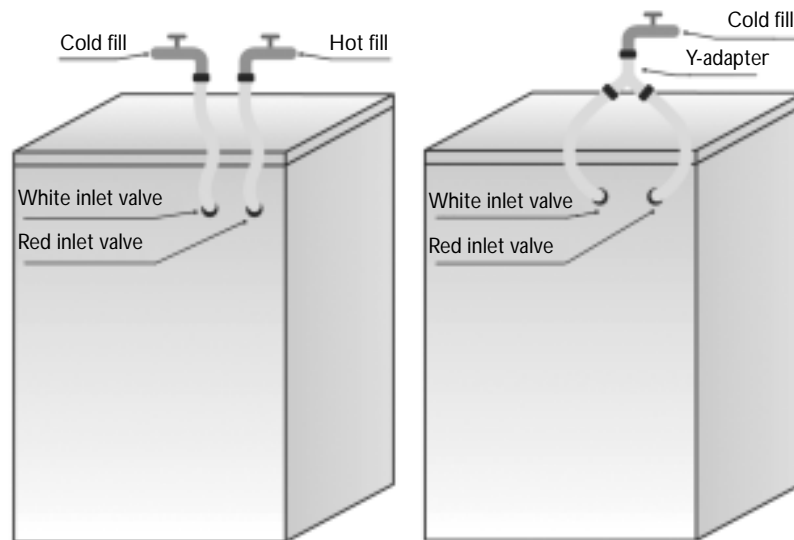


Fig. 1

Fig. 2

### If you wish to connect only the cold fill (Fig. 2):

1. Fix the enclosed Y-adapter to the cold fill tap.
2. Connect the two inlet valves on the rear of the machine to the Y-adapter by means of the two water inlet hoses.

**Make sure all connections are tightly fixed. The Y-adapter must not be connected to a hot fill water tap.**

**Do not allow children to operate, crawl on, near or inside your washer. Close supervision of children is necessary when the appliance is used near them.**