

CONTENTS

QUICK REFERENCE GUIDE



PROGRAMME CHART

PREPARING THE LAUNDRY

SELECTING A PROGRAMME AND OPTIONS

STARTING AND COMPLETING A PROGRAMME

CHANGING A PROGRAMME

INTERRUPTING A PROGRAMME

DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE BOOKLET

DEFINITION OF USE Page **12**

INSTALLATION Page **12**

TRANSPORT AND HANDLING Page **13**

DESCRIPTION OF THE DRYER Page **13**

VENT CONNECTION Page **14**

DOOR REVERSIBILITY Page **15**

SETUP THE DRYER Page **16**

ELECTRICAL CONNECTION Page **17**

SAFETY ADVICES Page **18**

GENERAL RECOMMENDATIONS Page **19**

GENERAL INFORMATION / DISPOSAL Page **19**

MAINTENANCE AND CLEANING Page **20**

AFTER-SALES SERVICE Page **20**

DEFINITION OF USE

- The dryer is exclusively destined to dry dryable laundry in quantities which are recommended in the PROGRAMME CHART.
- Observe the instructions given in this instruction for use and the programme chart before using the dryer.
- Keep the instruction for use and the programme chart. If you pass on the dryer to another person, also give him/her the instructions for use and the programme chart.
- The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given in this instruction for use.

INSTALLATION

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The dryer must be earthed as prescribed by law.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Mains cable replacement is only to be carried out by After-Sales-Service.
- After installation access to the mains plug has to be guaranteed or the all-pole disconnection has to be possible with a switch, in order to assure an immediate deactivation of the dryer in case of emergency.
- The replacement of the light bulb is only to be carried out by the After-Sales-Service.

3. Installation

- This appliance is equipped with an automatic detection system which stops the heating if there is no laundry in the drum.
- Do not install your dryer where it can be subject to extreme condition, such as: poor ventilation, temperature below 5°C or above 35°C.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way, that a full opening of the tumble dryer door is restricted.
- The exhaust-air must not be leaded into a air-outlet conduit which is used for heating appliances fired with gas, oil or solid fuel.
- Pay attention that the air-inlet openings are unobstructed.
- Take care not to install the dryer on a deep pile carpet.
- Take care not to trap the mains cable between the dryer and the wall.
- When installing the dryer always carefully level the dryer adjusting the two feet and check the correct leveling with a spirit level.
- If the dryer has to be installed due to lack of space directly next to a gas or coal stove, a heat insulating plate (85 x 57 cm) has to be installed in between, whose side against the stove has to be covered with aluminum foil.

TRANSPORT AND HANDLING

For moving the dryer, use a sack barrow on the rear of the dryer to lift it. This requires at least 2 persons.

Never lift the appliance by the worktop when transporting.

- Pull out the mains plug.
- Check if the dryer door is properly closed.
- Disconnect the vent hose from the adapter.
- Disconnect the adapter from the dryer.


DESCRIPTION OF THE DRYER

- A. Work top
- B. Contact pin
- C. Door:

To open the door, pull the handle.

To close the door, push gently until closed.

- D. Filter

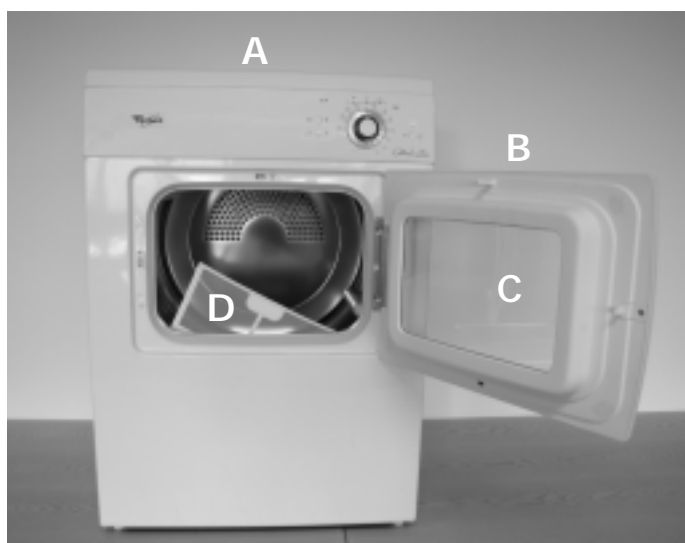

VENT CONNECTION

Installing the Vent hose

- A. Place a towel or the packaging material on the right-hand side next to the dryer.
- B. Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.
- C. Push the adapter (see illustration) to the connection located under the dryer and make sure that the adapter is well fixed to the dryer.
- D. Place the dryer back to his common position.
- E. Connect the hose to the adapter and put the other end of the hose to an opening that will get outside.
- F. In case the vent hose is connected outside, it is recommended to install a non return valve to avoid the cold air coming from the external side.



Venting outside


- Without kinking it, lead the vent hose outside (inside diameter 10 cm, maximum length with two bends 3 m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Do not connect the air vent hose to a chimney or to a mechanical ventilation extractor duct.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.
- Please provide adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

IMPORTANT

- **A minimum distance of 10 cm between rear of appliance and the wall must be observed.**
- **Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.**


DOOR REVERSIBILITY

A. Unplug the dryer.

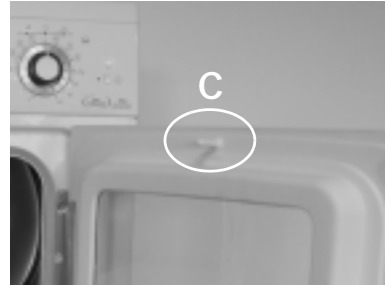

B. Open the door.

C. Using a spanner, turn the contact pin (C) in the upper part of the door through 90° and pull it out.

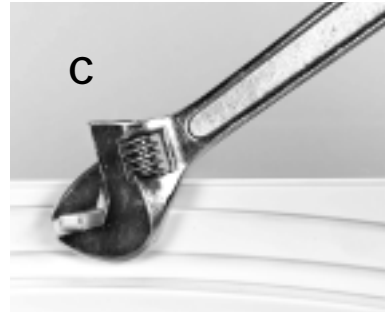

D. Removing the 2 door hinge screws, followed by the door.

E. Unscrew the 2 screws above and below the door lock system.

F. Removing the door lock: using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.


G. Reverse the door:

H. Fasten the door on the desired side using the 2 screws.

I. Insert the door lock system on the opposite and lock it securely.


J. Fix the 2 screws above and below the door lock system.

K. Replace the contact pin in the inside of the door (top).

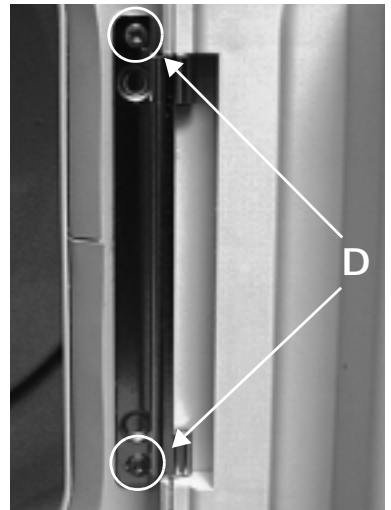

NOTE:

Use for the unscrewing a screw driver of the type "Torx T20".

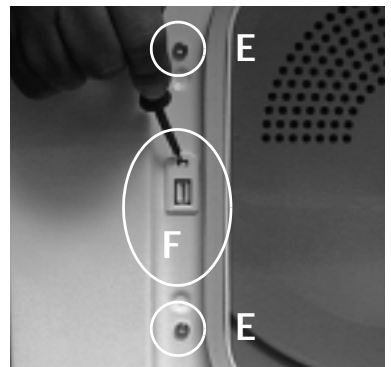

SETUP THE DRYER

- For security reason do not remove the worktop.
- Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

Stacking kit

Depending on the model of your washing machine, your dryer can be stacked on top of your front loading washing machine. For further information please contact the After-Sales-Service.

Minimum housing dimensions:

Width: 600 mm

Height: 855 mm

Depth: 560 mm

Sound level

- Sound pressure level, LPA < 70 dB(A)
(Kpa: +/-2,5 dB(A))

ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost, the plug must not be used until a correct replacement is fitted.

Correct replacements are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

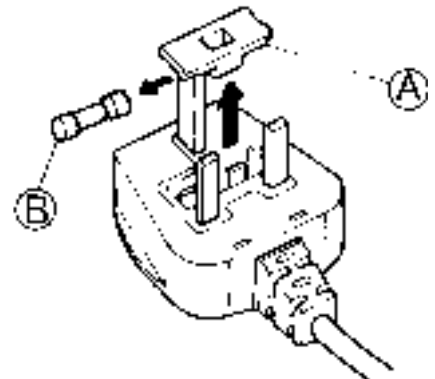




2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change the plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufacturer's instructions and current standard safety regulations.

SAFETY ADVICES

-  To minimize the risk of fire in a tumble dryer, the following should be observed.
- Oil-affected item can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the item can become hot enough to catch fire. Piling, stacking or storing oil-affected item can prevent heat from escaping and so create a fire hazard.
- Do not tumble dry unwashed items in the tumble dryer.
- Ensure that the appliance is maintained as shown in the chapter "Maintenance and cleaning".
- Ensure that the appliance is installed per the description above.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers must be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Do not use inflammable cleaning agents.
- Do not use the tumble dryer if chemicals have been used for cleaning.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads must not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never use and store flammable materials nearby the dryer.
- Never stop a tumble dryer before the end of the drying cycle, unless all items are quickly removed and spread out so that the heat is dissipated.
-  Attention rear panel can be hot.
- The dryer is appropriate for indoor use only.
- Do not use extension leads or multiple adaptors.
- If the dryer appears damaged or defective, unplug the appliance and contact the machine owner for contacting our After-Sales Service.
-  The drum surface can be hot. Users have to act with caution during loading and unloading.
- **Pay attention:** The appliance must be disconnected from power source during service and replacing parts. If the removal of the plug is intended the plug must always remain inside of the operator's visual field. If this is not possible, install a disconnection with a locking system in the isolated position.

User and child protection

- Children must not be allowed to play with the dryer.
- Ensure that children or small animals can not get into the drum.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

GENERAL RECOMMENDATIONS

- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- The final phase of a drying cycle always occurs without heat (cool down phase) to ensure that the items are left at a temperature that ensures that the items will not be damaged. Interrupting the cool down phase is not allowed.
- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged clean it with water and a soft brush.
- Since lint can go through the filter it is necessary to clean from time to time the complete filter area (including below the filter) with a brush, damp cloth or with a vacuum cleaner.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.


GENERAL INFORMATION / DISPOSAL

Packing

- The packing box may be fully recycled as confirmed by the recycling symbol.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



Disposing of packaging and old Dryer:

- The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.
- Before scrapping cut off the power cable so that the dryer cannot be connected to the mains.
- The symbol  on the product or on the documents accompanying the product indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.
- For more detailed information about treatment, recovery and recycling of this product please contact your local city office, your household waste disposal service or the shop where you purchased the product. .

Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time. For more detailed information, see the programme chart.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after every drying cycle.
- Place your dryer in a room with a temperature between 15°C and 20°C. In case of higher temperature ventilate the room, e.g. open the window.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the gentle option only with small loads.
- When drying cotton, for example dry iron dry and cupboard dry loads together. Start with the iron dry programme/ drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the cupboard dry setting.
- Set the programme selector knob always to the "0" position after the end of the cycle.

MAINTENANCE AND CLEANING

EACH DRYING CYCLE

- **Clean the lint filter at the end of every drying cycle.**
Open the door.
Pull the filter upwards.
Remove lint using a soft brush or your fingertips.
Push the filter back into place.

EACH THREE MONTHS

- **Clean vent hose and connection regularly to avoid blockage due to lint or foreign objects.**

AFTER-SALES SERVICE

Before contacting the After-Sales Service:

- Try to remedy the problem yourself (see "Troubleshooting Guide").
- Restart the programme to check whether the problem has solved itself.
- If the dryer continues to function incorrectly, call our authorised After-Sales Service.
- Use only authorised spare parts in the event of failure.
- The appliance must be disconnected from power source during service and replacing parts. If the removal of the plug is intended the plug must always remain inside of the operator's visual field. If this is not possible, install a disconnection with a locking system in the isolated position.

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the lower side of the door opening.
- Your full address and phone number.

SERVICE 0000 000 00000



If, after carrying out the above checks and the "Troubleshooting Guide" the malfunction persists or appears again, turn the dryer off and call the After-Sales Service.

The After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

Manufactured by:

Bauknecht / Whirlpool
Bauknecht Hausgeräte GmbH
Gottlob Bauknecht Straße 1-11
73614 Schorndorf

Approval Type

E 405 P Tumbledryer (Airvented)