EN AWM 8101/PRO

PROGRAMME CHART

Whirlpool
SENSING THE DIFFERENCE

A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication
C. "Water tap closed" indication
D. "Clean pump" indication
E. Programme selector

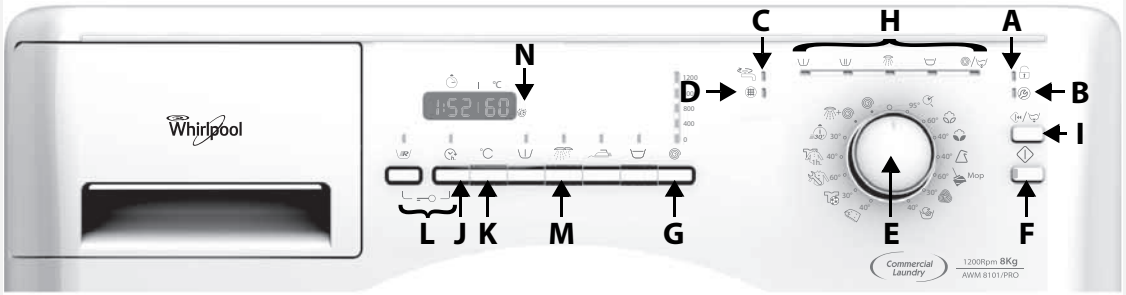

F. "Start/Pause" button
G. "Spin" button
H. Programme flow bar
I. "Reset/Drain" button
J. "Cycle end" button
K. "Temperature" button
L. Child lock button combination
M. "Favourites" button
N. Detergent overdosage indicator

Programme		Temperature °C	Care Labels	Max. Load kg	Type of wash/Notes *We recommend not to deselect options which are preset for programmes, to maximize their performance.*	Detergents and additives			Selectable options					Cycle end	Spin	
						Pre-wash	Main wash	Softener	Rapid	Pre-wash	Intensive rinse	Easy ironing	Rinse hold		Spin speed	Max. Spin Speed rpm
Cotton/ Antibacterial 95°		*70 - 95 °C*	95	8.0	**Normally to heavily soiled white bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.** At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry.	❇	Yes	❇	—	❇	❇	❇	❇	❇	❇	max.
Cotton 60°		*50 - 60 °C*	60 50	8.0	**Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.**	❇	Yes	❇	❇	❇	❇	❇	❇	❇	❇	max.
Coloured cotton 40°		*cold - 40 °C*	40 30	8.0	**Normally soiled garments made of cotton and linen.**	❇	Yes	❇	❇	❇	❇	❇	❇	❇	❇	max.
Synthetics 40°		*cold - 60 °C*	60 40 30	3.5	**Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.**	❇	Yes	❇	❇	❇	❇	❇	❇	❇	❇	max.
Mops and towels 60°	Mop	*cold - 95 °C*	95 60 40 30	5.0	**Normally to heavily soiled washable cleaning cloths, mops, towels and similar laundry made of robust cotton cloth types.** Intensive wash programme with an included prewash; add detergent also to the prewash chamber of the detergent drawer in case of heavy soiling.	❇	Yes	❇	❇	❇	❇	❇	❇	❇	❇	max.
Wool 30°		*cold - 40 °C*	WOOLMARK 40	2.5	**Only woollens, labelled with the Woolmark and identified as machine washable.**	—	Yes	❇	—	—	—	—	❇	❇	❇	1000 [1)]
Handwash 40°		*cold - 40 °C*		2.0	**Textiles made of silk, linen, wool and viscose marked as "handwashable".**	—	Yes	❇	—	—	—	—	❇	❇	❇	400 [1)]
Big Items 40°		*cold - 60 °C*	60 40 30	3.0	**Blankets made of synthetic fibres; bedcovers filled with feathers, polyester or other artificial fibres; sleeping bags, bathmats and similar items.**	❇	Yes	❇	—	❇	❇	—	❇	❇	❇	1000 [1)]
Sport 30°		*cold - 30 °C*	30 30	3.5	**Normally soiled and sweaty sportswear made of cotton jersey or microfibres.** This programme includes a prewash cycle – you can add detergent also to the prewash chamber. Do not add softener.	❇	Yes	—	❇	❇	❇	❇	❇	❇	❇	max.
Working clothes 60°		*cold - 60 °C*	30 40 95 60	5.0	**Dirty working clothes made of robust cotton material or cotton-synthetics blends.** Options "Prewash" and "Intensive rinse" are preset in this programme - thus it is optimized to enable the best cleaning result. For extremely dirty garments, we recommend to shake them out thoroughly before putting them into the washing machine. - If you want, you can use a stain remover on oxygen basis.	❇	Yes	❇	❇	❇	❇	❇	❇	❇	❇	max.
Mixed 40°	1h.	*cold - 60 °C*	60 40 60 40	6.0	**Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends.** Effective one-hour programme. Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain removers.	—	Yes	❇	—	—	❇	❇	❇	❇	❇	max.
Quick wash 30°	30'	*cold - 30 °C*	30 30	6.0	**Briefly worn clothing made of cotton, artificial fibers and blends with cotton.** Refresh programme. Use lowest recommended detergent amount.	—	Yes	❇	—	—	—	—	❇	❇	❇	max.
Rinse & Spin		—	—	8.0	**Separate rinse and intensive spin programme.** Suitable for robust laundry.	—	—	❇	—	—	❇	—	❇	❇	❇	max.
Spin		—	—	8.0	**Separate intensive spin programme.** Suitable for robust laundry.	—	—	—	—	—	—	—	—	❇	❇/—	max.

❇: optional / Yes : dosing required
1) For improved garment care, spin speed is restricted in this programme.

- Respect the manufacturer's recommendations on the care label

Whirlpool is a registered trademark

5019 300 02737

Whirlpool
SENSING THE DIFFERENCE

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)	
					without "Rapid"	with "Rapid"
Cotton / Antibacterial 95°	95	8.0	90*	2.40	02:50	—
Cotton 60°	60	8.0	70	1.36	02:30	01:50
Cotton 40°	40	8.0	80	0.85	02:15	01:35
Synthetics 40°	40	3.5	55	0.53	01:39	01:14
Mops and towels 60°	60	5.0	75	1.40	02:30	01:50
Wool 30°	30	2.5	60	0.40	00:42	—
Handwash 40°	40	2.0	49	0.63	00:40	—
Big Items 40°	40	3.0	80	0.75	01:49	—
Sport 30°	30	3.5	55	0.42	01:35	01:05
Working Clothes 60°	60	5.0	80	1.45	02:40	01:55
Mixed 40°	40	6.0	70	0.58	01:20	—
Quick wash 30°	30	3.0	45	0.30	00:30	—

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. The consumption data indicated are based on an inlet water temperature of approx. 15°C through cold and hot fill valve. They may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

The time indicated on the display can deviate from the values in the table, because it takes into account the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

ADD DETERGENTS AND SELECT PROGRAMME

Load your laundry, close the door properly and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.
Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **"Start/Pause"** indicator ▷II blinks. The temperature and spin speed can be altered by pressing the "Temperature" °C or the "Spin" button. The washing machine is designed to save energy; therefore, if you have selected a programme but do not start it within about a quarter of an hour, it will switch off automatically. To switch it on again, turn the programme selector to "Off/O" and then to the desired programme again.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the indicator lights up. If the combination programme/option or option/option is not possible, the indicator switches off automatically.

"Rapid" button
- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.
- Not selectable for Cotton / Antibacterial 70 - 95 °C.

"Prewash" button
- Adds a prewash cycle to the wash programme selected; prolongs the programme by about a quarter of an hour.
- To achieve a good wash result, we recommend not to deselect this option.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Intensive rinse" button
- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water and for helping people with allergies.

"Easy ironing" button
- Reduces creasing by an increased water quantity and a very gentle spin.

"Rinse hold" button
- The laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing.
- The programme stops to "Rinse hold" when the indicator blinks; the **"Start/Pause"** indicator blinks as well.
- To terminate the "Rinse hold" by spinning the laundry, press **"Start/Pause"** - the laundry will be spun with the default spin speed. You can also select another spin speed with the "Spin" button before you start the spin cycle with **"Start/Pause"**.
- To terminate the "Rinse hold" by draining the water, without spinning, select spin speed "0"; then press **"Start/Pause"** to start the draining.
- Do not leave the laundry to soak for too long in the "Rinse hold" (especially silk).

"Spin" button
- Press the button to change the predefined spin speed.
- If you select spin speed "0", the final spinning is cancelled, and the water is drained out only. However, intermediate spin phases remain during rinse.

SET CYCLE END

With this function you can postpone your programme to complete at a later time: press the button to select in how many hours the programme shall be finished. Thus, it allows you to have your laundry ready at a particular time and to profit from more favourable energy rates during the night, for example.
- Do not use liquid detergent when activating this function.
- The time until the cycle end can be selected in full hour time segments (1 to 24 h). When you press the button, the shortest possible time will be displayed; keep on pressing the button to loop through all the available times. To remove it again, keep on pressing the button until you see the value "0:00".
- When you have selected the desired time until the cycle end, press **"Start/Pause"** - the countdown will begin.
- During the countdown, you can still modify the programme setting (select or deselect options, change spin speed etc.). If the modifications prolong the programme duration so that it overruns the originally set time until the cycle end, the programme will start immediately.
- Sometimes the programme may finish before the selected time until the cycle end has expired (e.g. for small loads). In this case, the washing machine will tumble the laundry regularly to keep it fresh, until the selected cycle end time has expired. During tumbling, the display will show an animation. The tumbling phase can be stopped at any time either by pressing any button or by rotating the programme selector; the animation will stop and the door will unlock in about 1 minute as indicated on the display.

"DOOR OPEN" INDICATOR

Before starting and after end of a programme, the indicator lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme before the end".

PROGRAMME START ▷II

Open the tap and press the **"Start/Pause"** button ▷II. The **"Start/Pause"** indicator ▷II lights up. The programme flow bar shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the laundry load is detected or the programme duration is adapted, the display shows an animation.

CHILD LOCK

Prevents children from starting a wash cycle or changing the settings of a running programme. Cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock:
- Turn the programme selector to a programme position, or run a programme as usual.
- Press the 2 buttons marked with the key symbol simultaneously for at least 3 seconds. A key-like symbol will shortly appear on the display to indicate that the child lock is active.

Any time you try to change a programme setting with active child lock, the display will briefly show the key-like symbol. The programme setting cannot be changed anymore. The only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock proceed in the same way as for activating it.

FAILURE INDICATORS

If one of the failure indicators blinks, refer to the "Troubleshooting Guide" in your "Instructions for Use".

Spin speed indicator blinks: Unbalance during spinning.

DETERGENT OVERDOSAGE INDICATOR

If you used too much detergent, a small vertical bar will light next to this symbol after the end of the programme.

PROGRAMME END

- The "Door open" indicator lights up. The display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.

1. Turn the programme selector to the "Off/O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press **"Start/Pause"** ▷II to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press **"Start/Pause"** ▷II again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME

The **"Reset/Drain"** button cancels a programme before the end.
- Press the **"Reset/Drain"** button for at least 3 seconds. "rES" appears on the display. The water is drained out; it may last some time until you can open the door.

Whirlpool is a registered trademark